


T7 + T67 + T78




T7, T67 and T78 - Spare Parts Manual - 02/13/14

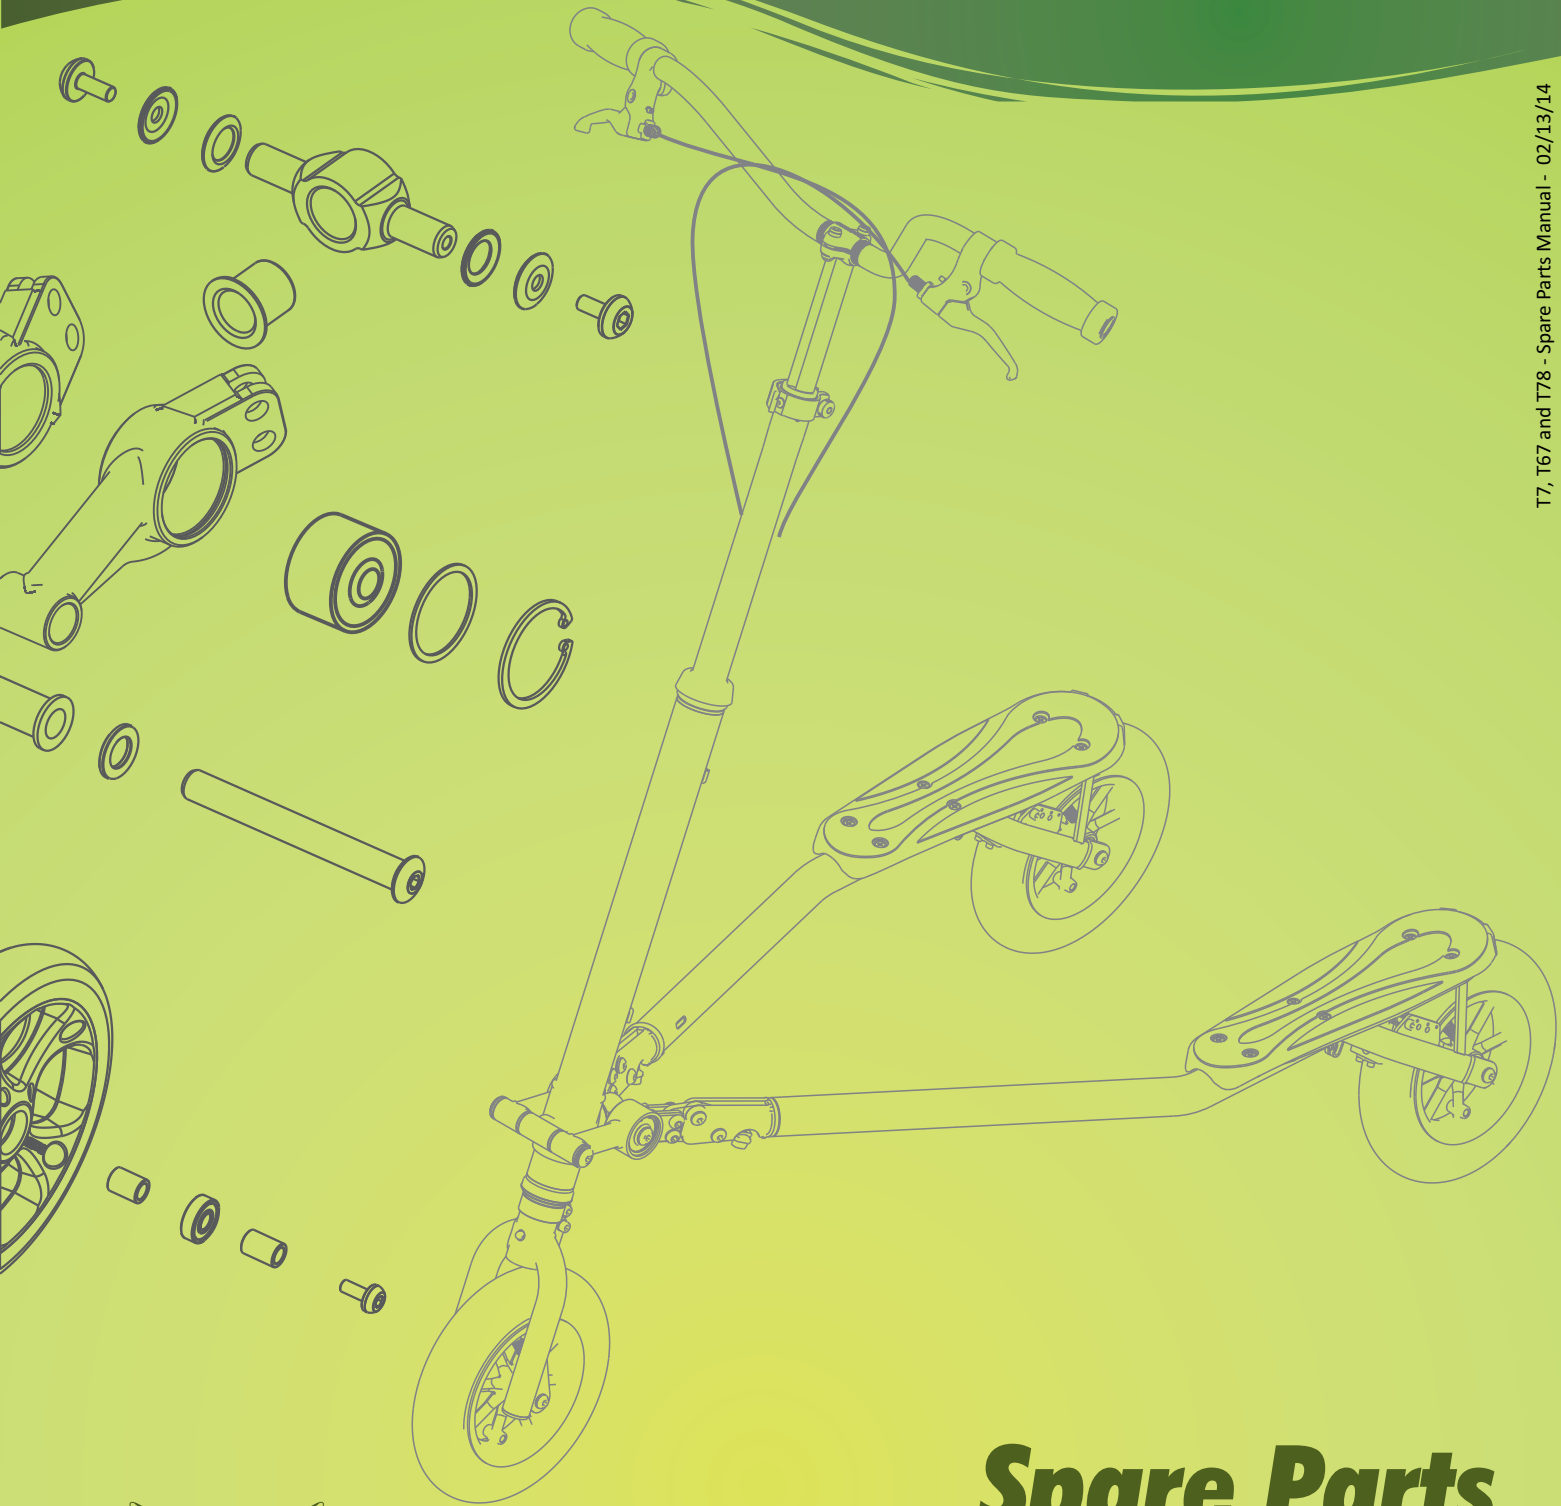

Spare Parts Manual

THIS MANUAL SUPPORT MODELS:
T7, T67 and T78


Group: BRAKE (B)

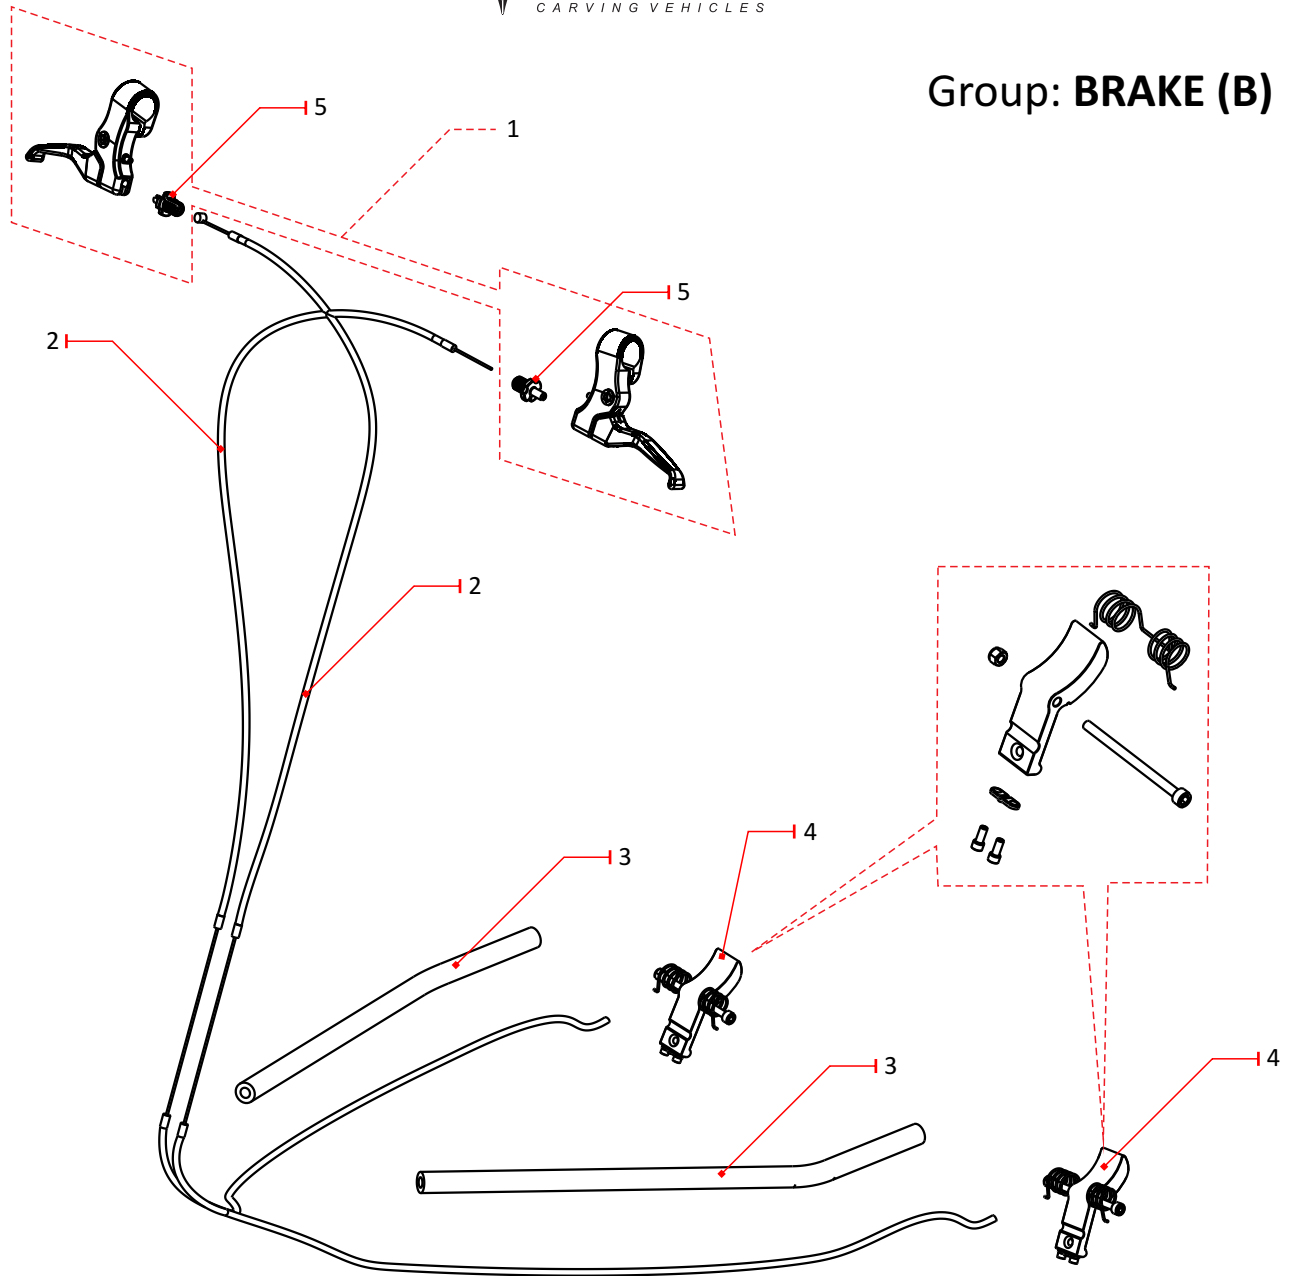

ITEM	REFERENCE	PART NAME	QTY*	MODEL	NOTE
1	BL-002	BRAKE LEVER PAIR	01	T7, T67, T78	
	BL-005	BRAKE LEVER PAIR w/ lock	01	T7, T67, T78	
2	BCS-005	BRAKE CABLES SET, PAIR	01	T7, T78	
	BCS-006	BRAKE CABLES SET, PAIR	01	T67	
3	CUS-001	CUSHION, ARM BRAKE CABLE	02	T7, T67, T78	
4	PBS-004	PAD set, BRAKE T78	02	T7, T78	
	PBS-005	PAD set, BRAKE T67	02	T67	
5	BLA-001	BRAKE LEVER, ADJUSTER	02	T7, T67, T78	

*Quantity needed to 1 brake set


Group: CAMBERING (C)

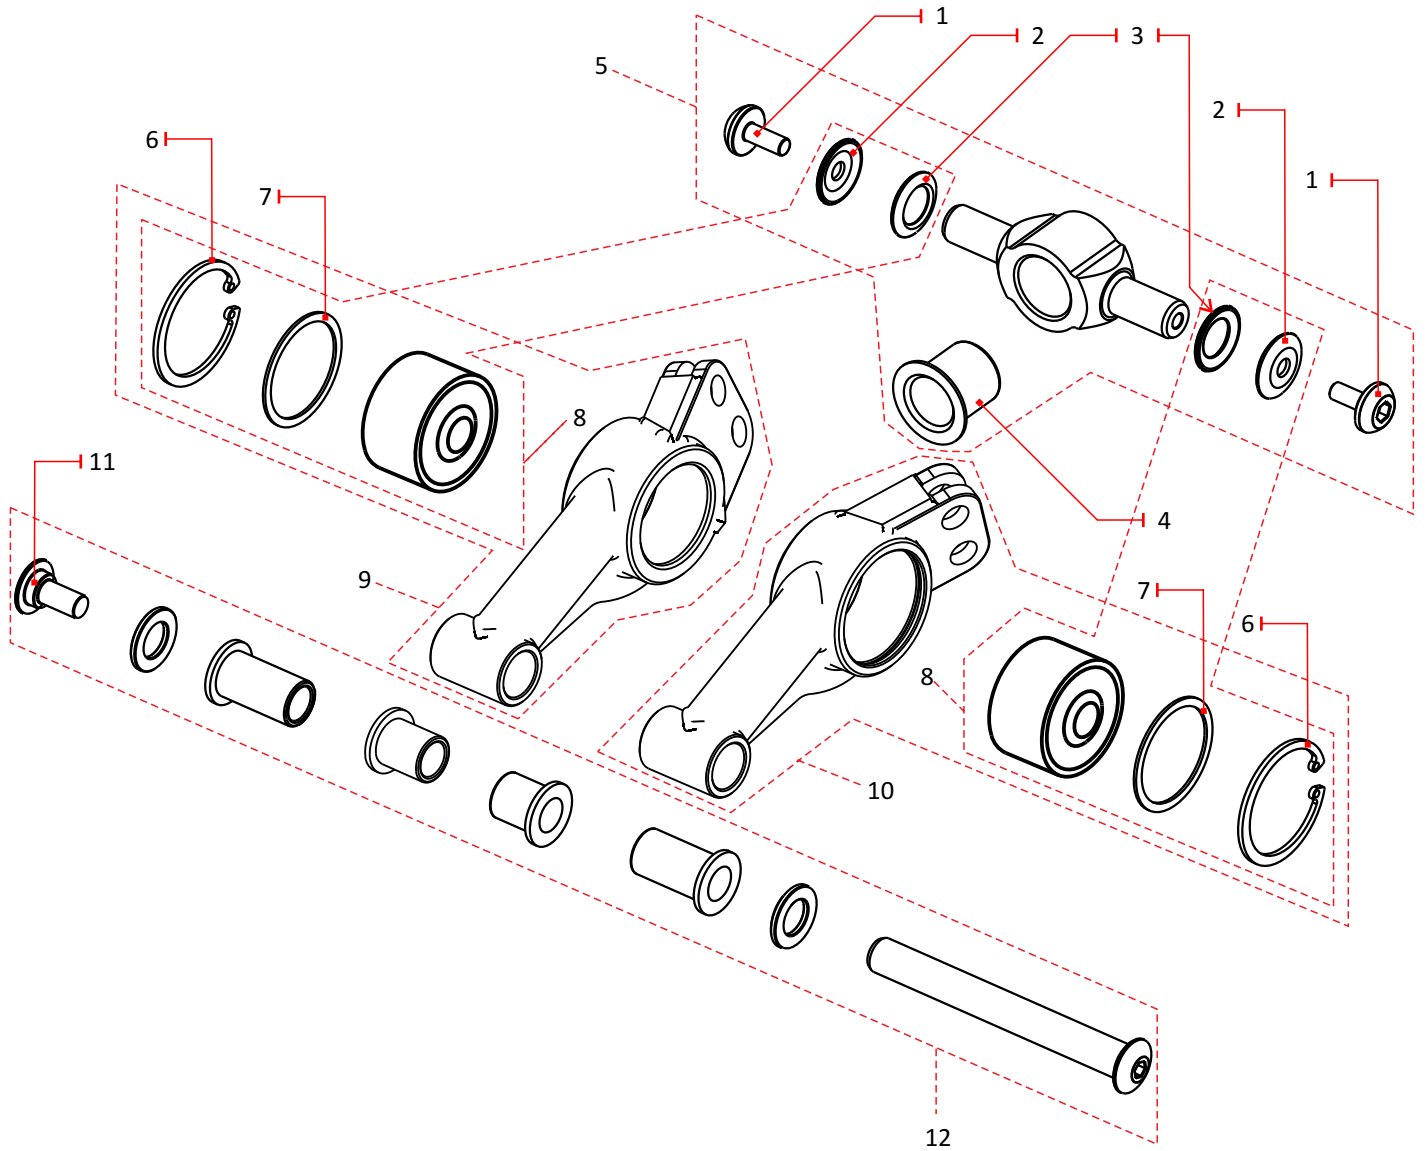

ITEM	REFERENCE	PART NAME	QTY*	MODEL	NOTE
1	BT-020	BOLT, YOKE all	02	T7, T67, T78	M6 x 15 x 17 hex5 Dacro finish
2	WA-003	WASHER, PU BUSHING outside	02	T7, T67, T78	22x6x2
3	WA-007	WASHER, PU BUSHING inside	02	T7, T67, T78	22x12x2
4	YBU-003	BUSHING, YOKE	01	T7, T67, T78	1 piece
5	YKS-003	YOKE SET	01	T7, T67, T78	v3 with 1 bushing, 2 bolts and 4 washers
6	RTR-001	RETAINING RING , PU BUSHING	02	T7, T67, T78	42.5 x 1.75 C ring
7	WA-005	WASHER, PU BUSHING retaining	02	T7, T67, T78	39.8x34x1
8	PUS-003	PU BUSHING SET (84 Shore A)	02	T7, T67, T78	with 2 washers and 2 retaner ring (clear)
9	EXT-005R	EXTENSION SET, RH ARM T67/T78	01	T7, T67, T78	with bushings
10	EXT-005L	EXTENSION SET, LH ARM T67/T78	01	T7, T67, T78	with bushings
11	BT-030	BOLT, MAIN AXLE	01	T7, T67, T78	M8 x 19mm hex5
12	AXS-008	AXLE SET, MAIN	01	T7, T67, T78	

*Quantity needed to 1 cambering set


Group: FOLDING (FS)

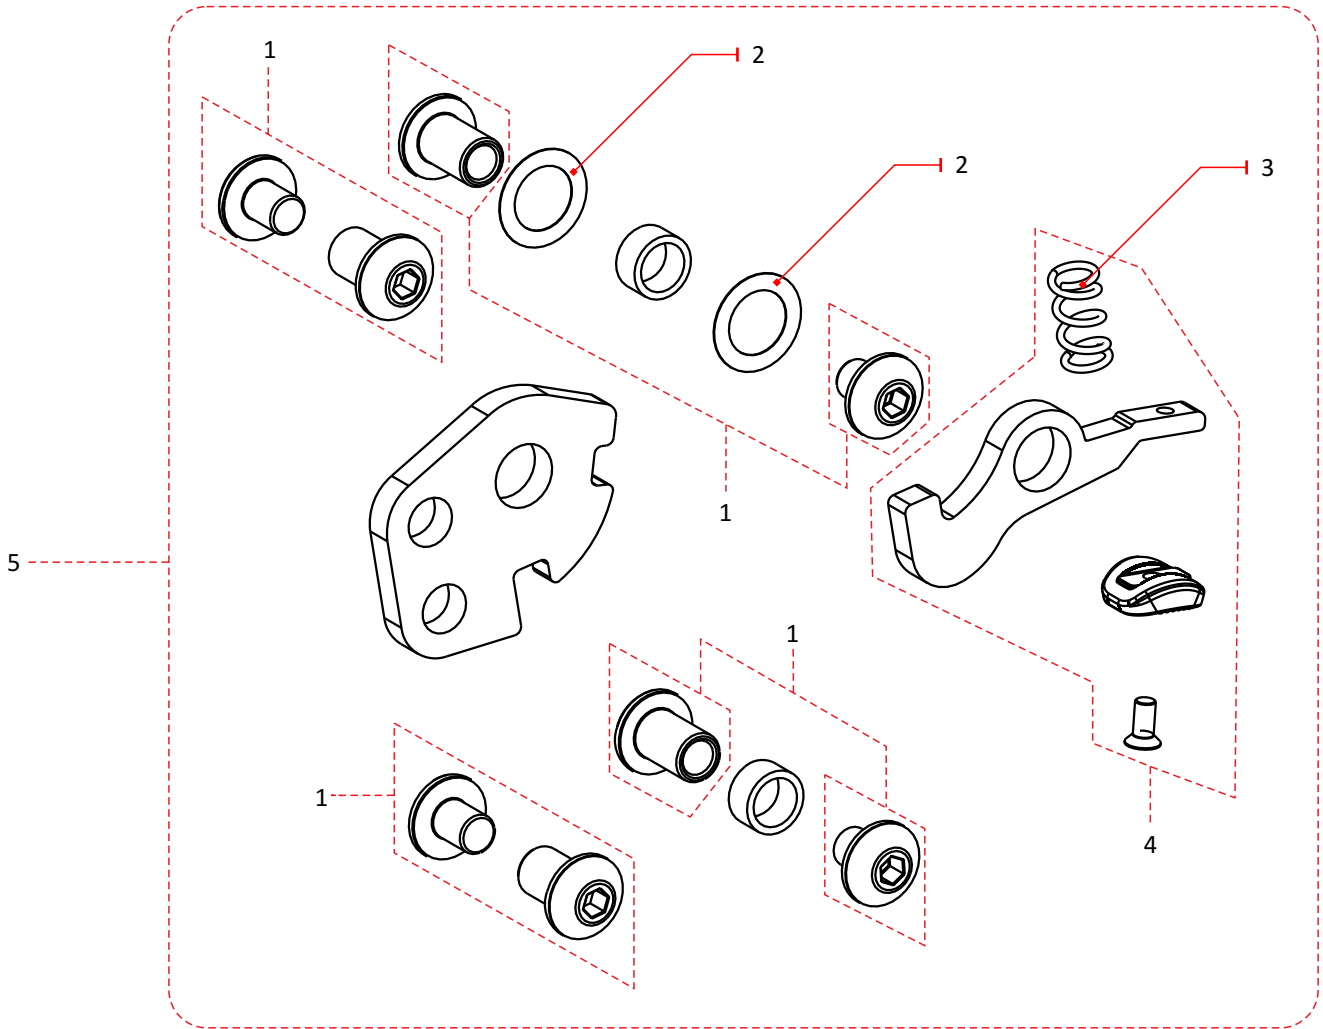

ITEM	REFERENCE	PART NAME	QTY*	MODEL	NOTE
1	AXS-003	AXLE SET, FOLDING	04	T7, T67, T78	four axle bolts
2	SM-002	SHIM, FOLDING AXLE	02	T7, T67, T78	16 x 10 x 0.2
3	SPL-002	SPRING, TRIGGER T67 T78	01	T7, T67, T78	
4	TGS-001	TRIGGER SET	01	T7, T67, T78	
5	FMS-001	MECHANISM SET, FOLDING	01	T7, T67, T78	

*Quantity needed to 1 folding set



Group: FRAME (F)

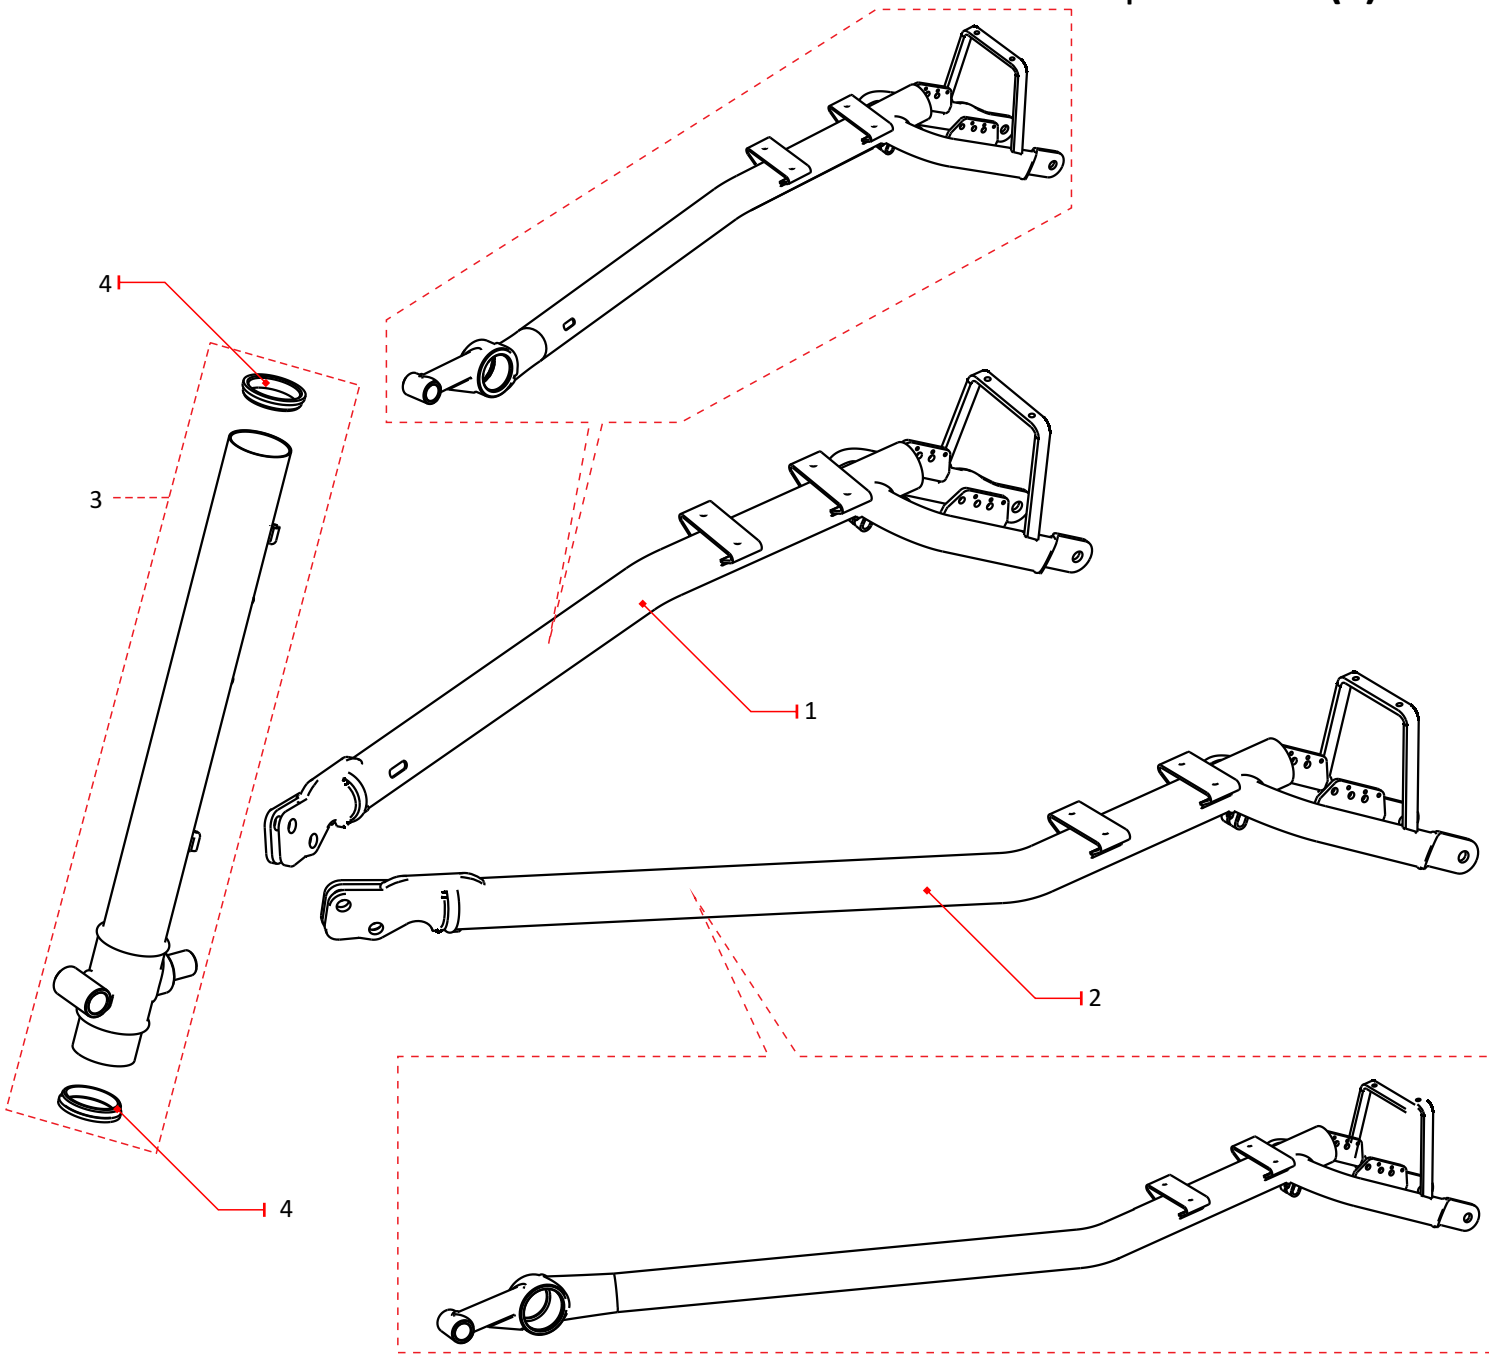

ITEM	REFERENCE	PART NAME	QTY*	MODEL	NOTE
1	AB-007	ARM BASIC, RH T67	01	T67	
	AB-009	ARM BASIC, RH T78	01	T78	
	AB-029	ARM BASIC, RH T7	01	T7	
2	AB-008	ARM BASIC, LH T67	01	T67	
	AB-010	ARM BASIC, LH T78	01	T78	
	AB-030	ARM BASIC, LH T7	01	T7	
3	FSS-005	FRONT STRUCTURE SET T78	01	T78	
	FSS-006	FRONT STRUCTURE SET T67	01	T67	
	FSS-011	FRONT STRUCTURE SET T7	01	T7	
4	ADP-002	ADPATER, FRONT STRUCTURE END	02	T7, T67, T78	

*Quantity needed to 1 frame set

Group: **STEERING (S)**

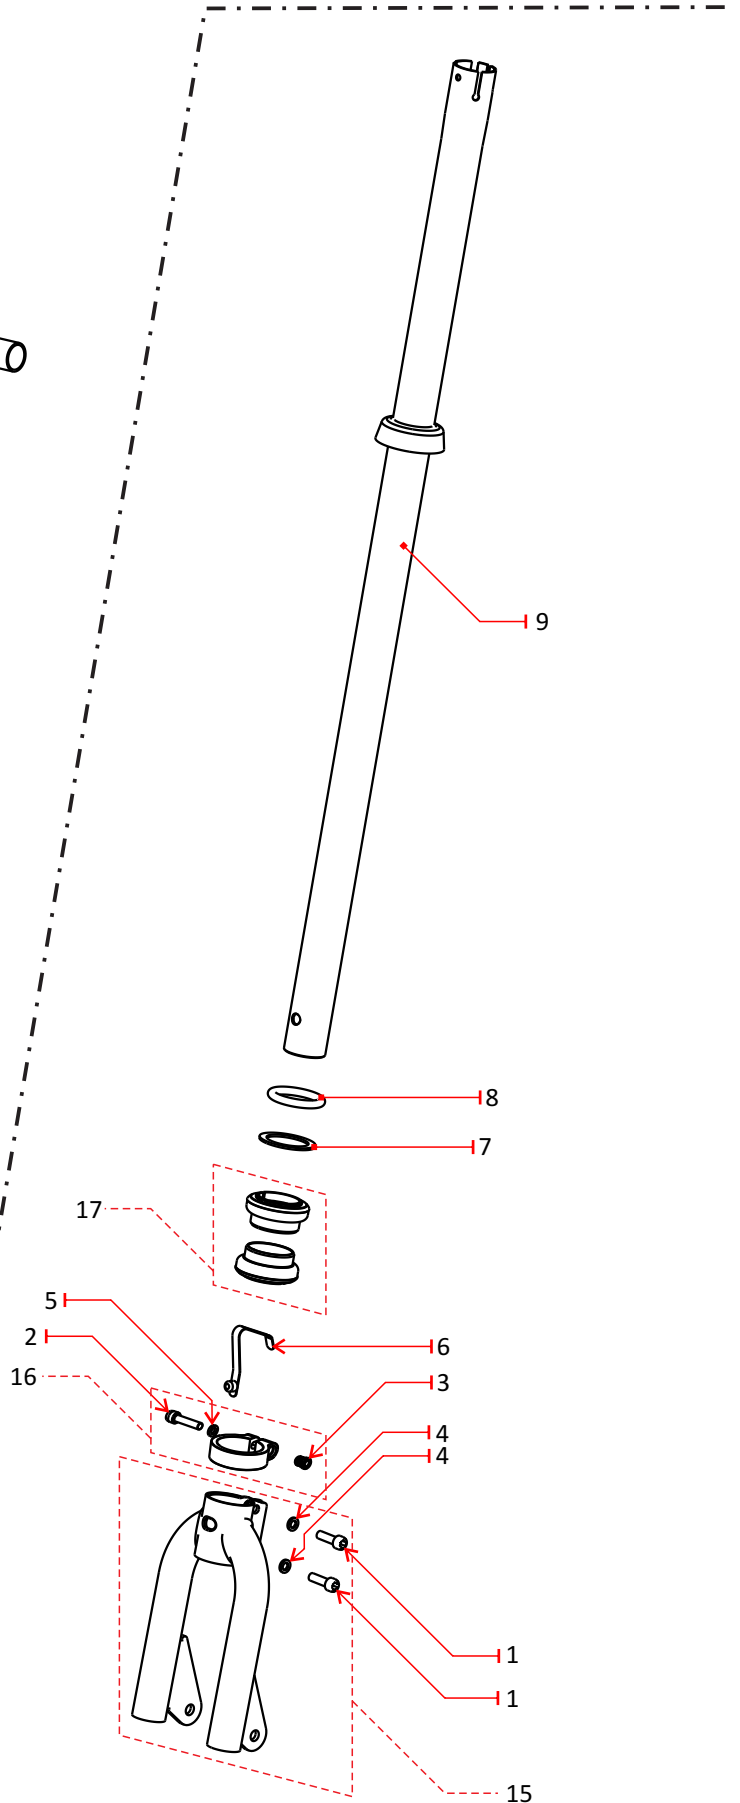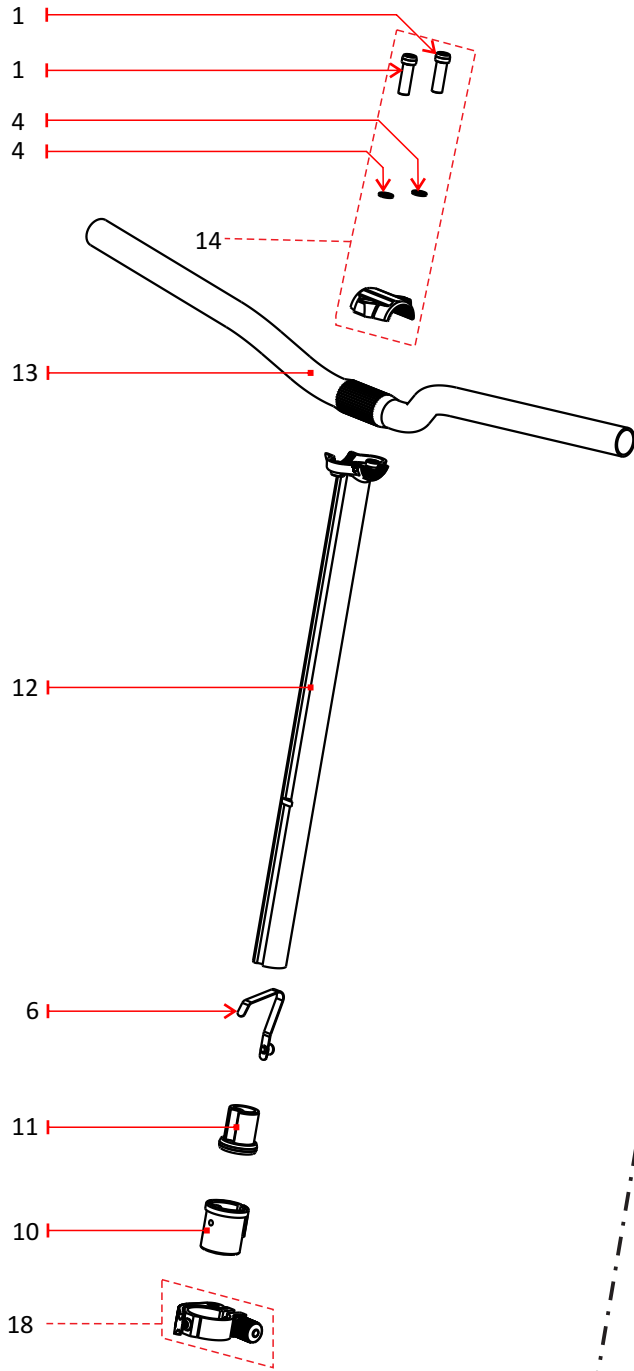


Group: STEERING (S)

ITEM	REFERENCE	PART NAME	QTY*	MODEL	NOTE
1	BT-007	BOLT, STEM CAP AND FRONT FORK	04	T7, T67, T78	M8 x 24mm
2	BT-011a	BOLT, CLAMP STEERING AXLE	01	T7, T67, T78	M6 x 18mm
3	INS-001	INSERT, STEEL THREADED FORK/ST CLAMP	01	T7, T67, T78	
4	WA-002	WASHER, CLAMP FRONT FORK/STEM CAP	04	T7, T67, T78	11x8.5x1.2
5	WA-001	WASHER, CLAMP STEERING AXLE	01	T7, T67, T78	9x6.5x1.2
6	PP-001	PUSH PIN	02	T7, T67, T78	
7	WA-006	WASHER, HEADSET	01	T7, T67, T78	
8	OR-001	O'RING, HEADSET	01	T7, T67, T78	
9	SA-004	STEERING AXLE T78	01	T78	
	SA-005	STEERING AXLE T67	01	T7, T67	
10	QRB-003	BUSHING, QR	01	T7, T67, T78	
11	PSP-001	PLUG, STEM POST GUIDE	01	T7, T67, T78	
12	SPS-006	STEM POST SET, STEERING	01	T7, T67, T78	
13	HB-005	HANDLEBAR T67	01	T78	
	HB-006	HANDLEBAR T78	01	T7, T67	
14	CPS-005	CAP SET, STEM	01	T7, T67, T78	
15	FKS-004	FORK SET, FR T78	01	T7, T67, T78	
16	CSS-001	CLAMP SET, STEERING AXLE	01	T7, T67, T78	
17	HS-003	HEAD SET, THREDLESS	01	T7, T67, T78	
18	QRS-004	CLAMP SET, QR	01	T7, T67, T78	

*Quantity needed to 1 steering set


Group: TRIM (T)

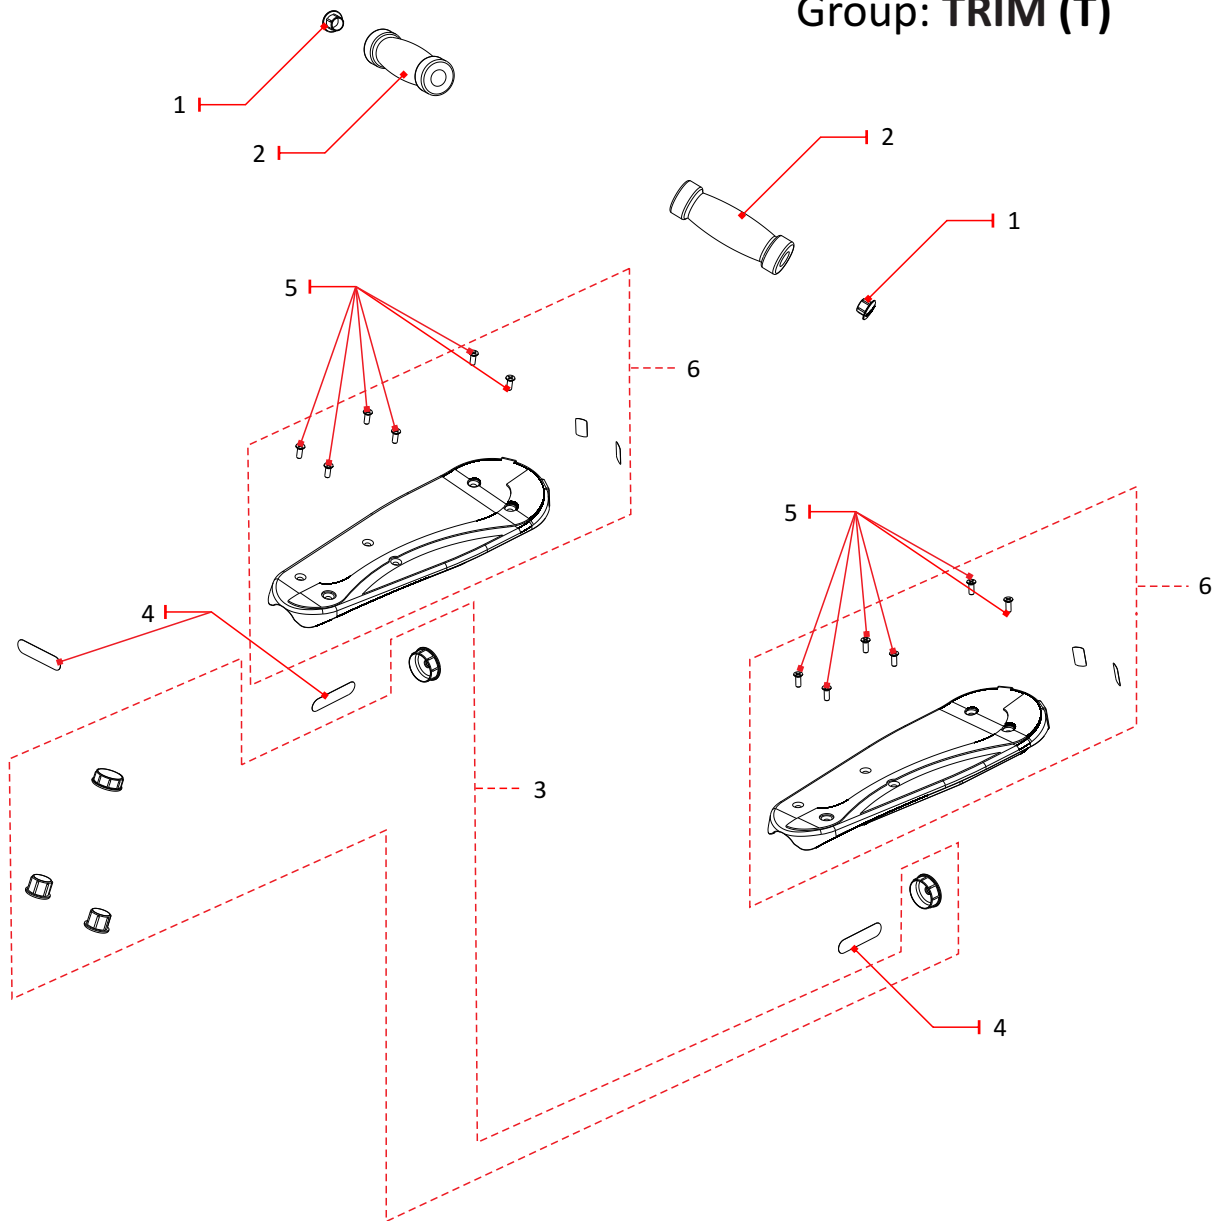

ITEM	REFERENCE	PART NAME	QTY*	MODEL	NOTE
1	PLU-001	PLUG, HANDLEBAR END	02	T7, T67, T78	
2	HG-001	HAND GRIP PAIR, FOAM	01	T7, T67, T78	
3	PLS-006	PLUGS SET	01	T7, T67, T78	
4	RFS-001	REFLECTOR SET	01	T7, T67, T78	
5	BT-010	BOLT, DECK	12	T7, T67, T78	
6	DK-002	DECK SET	02	T7, T67, T78	

*Quantity needed to 1 trim set

Group: WHEEL (W)

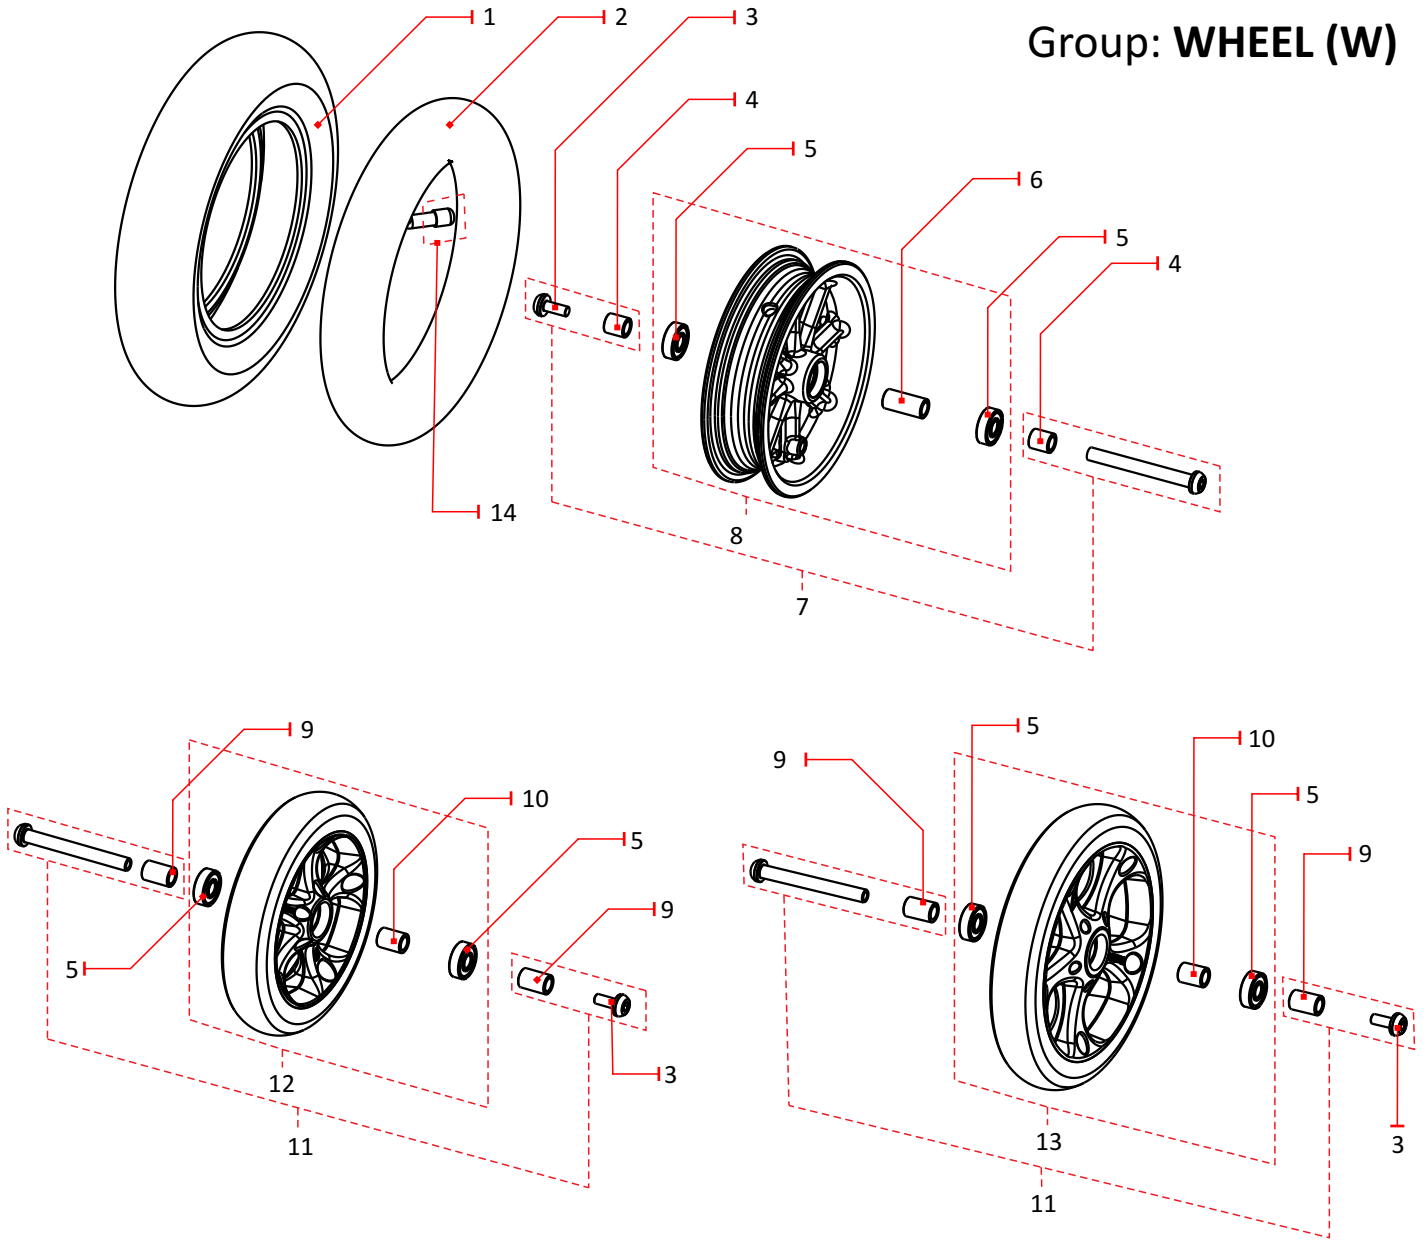

ITEM	REFERENCE	PART NAME	QTY*	MODEL	NOTE
1	TR-003	TIRE 8.5" x 2"	03	T78	
2	TB-003	TUBE 8.5" x 2"	03	T78	
3	BT-015	BOLT, WHEEL AXLE	03	T7, T67, T78	M6 x 15 hex5
4	SW-005	SPACER, WHEEL AXLE T78	02	T78	13 mm long, air wheel
5	BE-001	BEARING, WHEEL - ABEC 5	06	T7, T67, T78	bearing 608ZZ
6	SW-011	SPACER, WHEEL BEARING T8, T78Air	04	T78	long spacer 26mm - 8"pu and 8.5" air wheels
7	AXS-016	AXLE SET, WHEEL T78	01	T78	with bolt and 2 wheel spacers - 13 mm
8	WS-010	WHEEL SET, 8.5 AIR - T8, T78	01	T78	with bearings and spacer, no tire
9	SW-004	SPACER, WHEEL AXLE T67,T78	06	T7, T67, T78	18 mm long, pu wheel
10	SW-012	SPACER, WHEEL BEARING T67,T78	02	T7, T67, T78	short spacer 6"and 7"pu wheels
11	AXS-017	AXLE SET, WHEEL T67, T78, T7	02	T7, T67, T78	with bolt and 2 wheel spacers 18 mm and 13mm
12	WS-002	WHEEL SET, 6" PU - T6, T67	02	T67	with bearings and spacer (spec colors rim and pu)
13	WS-004	WHEEL SET, 7" PU - T67, T78	01	T67	with bearings and spacer (spec colors rim and pu)
			02	T7, T78	with bearings and spacer (spec colors rim and pu)
14	TVC-001	CAP, TIRE VALVE	03	T7, T67, T78	

*Quantity needed to 1 wheel set